























Spare parts list








				
AVR	Voltage Meter	DC Reset	Circuit Breaker	Hour Meter
				
Bridge	Battery	Brush Assembly	Fan	Battery Bracket

Spare parts list

				
Keyed Start System	Oil Alert (Engine Oil Level Switch)	Oil Protector (Oil Sensor)	Ignition Coil	Charge Coil
				
Governor Spring	Governor Rod	Throttle Return Spring	Governor Arm Shaft	Governor Gear Set



Spare parts list

				
Gas Mixer	Insulator Assembly (with tube and Clip)	Up Diaphragm	Down Diaphragm	Diaphragm Spring
				
Choke Valve Grip	Bottom Rubber Absorber	Air Filter	Air Filter Bracket	Oil Cap













Spare parts list

				
Cylinder Cover Gasket	Oil Seal (Crankshaft)	Flywheel Fan	End Cover (Generator)	Stator Bracket
				
Cylinder Head	Cylinder Head Cover	Piston Ring	Piston	Piston Pin and Clip

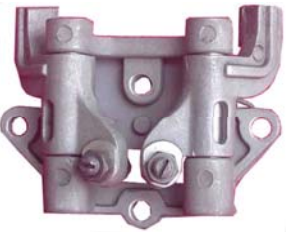











Spare parts list





				
Connecting Rod	Valve Push Rod	Valve Lifter	Rocker Arm	Rocker Arm(CC1200)
				
Intake and Exhaust Valve	Valve Spring	Valve Spring Seat	Plate Push Rod Guide	Crankshaft



Spare parts list

				
Camshaft	Balance Shaft	Spark Plug	Startup Motor	Recoil Starter
				
Gas Tube Clip	Vacuum Tube Clip	Air Choke Plate (NG)	Insulator Gasket I	Insulator Gasket II

Spare parts list

			
Mixer Gasket III	Gasket (Cylinder Head)	Gasket (Muffler)	Gasket (Crankcase Cover)